

LEVEL ROW AFTER
EACH SECTION IS ASSEMBLED
CHECK LEVEL OF ENTIRE
ROW PRIOR TO WORKSURFACE
INSTALLATION

