

CB Series Shop Desk

TOOLS REQUIRED FOR ASSEMBLY

Electric Hand Drill, Phillips Head Bit, 3/8" Magnetic Hex Driver Bit.

BEFORE ASSEMBLING THE WORKBENCH


Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled.

We suggest that you clear & vacuum the area where the bench is to be assembled.

It is important that the bench is assembled in the same sequence as instructed.

HARDWARE

All assembly hardware is provided.

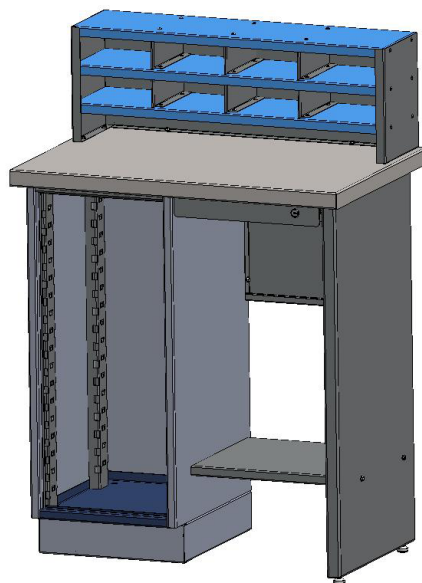


STEP 1

Attach the modesty panel to the side of the cabinet using (2) 1/4-20 x 1/2" Flange head bolts into the pre-installed threaded inserts. Do not fully tighten yet.



1/4-20 x 1/2"
Flange Head Bolt

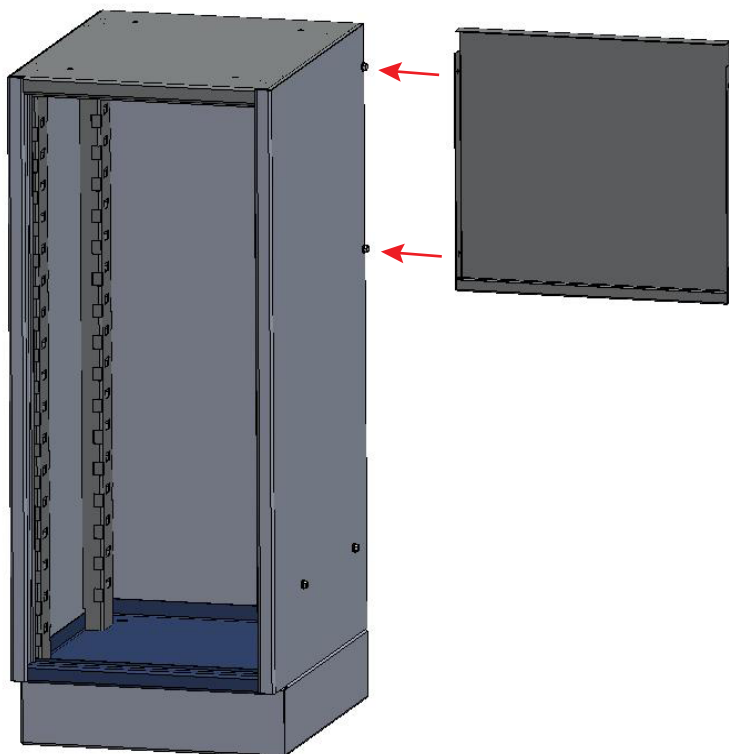


STEP 2

Attach the modesty panel to the leg pedestal using (2) 1/4-20 x 1/2" Flange head bolts into the pre-installed threaded inserts. Do not fully tighten yet.



1/4-20 x 1/2"
Flange Head Bolt

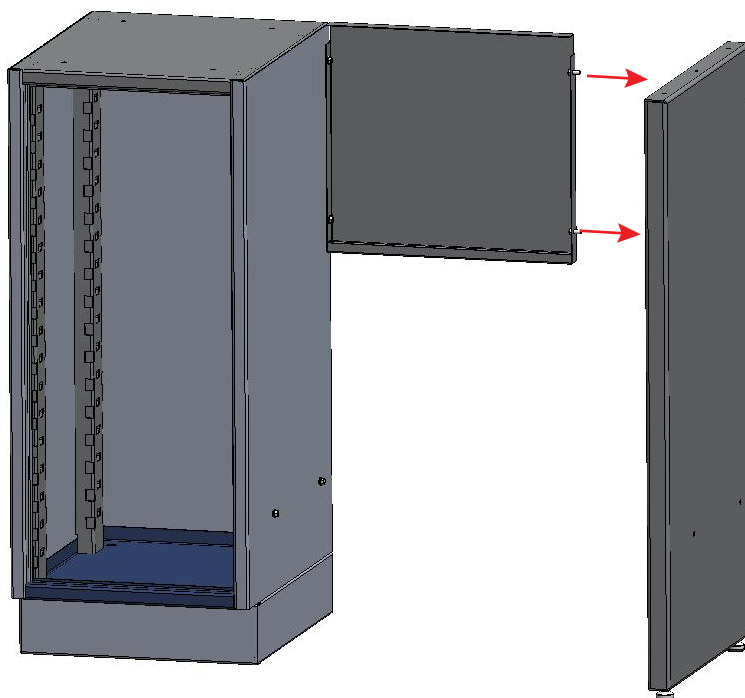

STEP 3


Insert the lower shelf between the cabinet and the leg pedestal carefully. With the bolts not being fully tightened from the previous steps you should be able to slightly spread the leg away from the cabinet to make room and not scratch the paint.

Attach the shelf using (4) 1/4-20 x 1/2" Flange head bolts into the pre-installed threaded inserts.

You can go back and tighten all bolts from previous steps.



1/4-20 x 1/2"
Flange Head Bolt

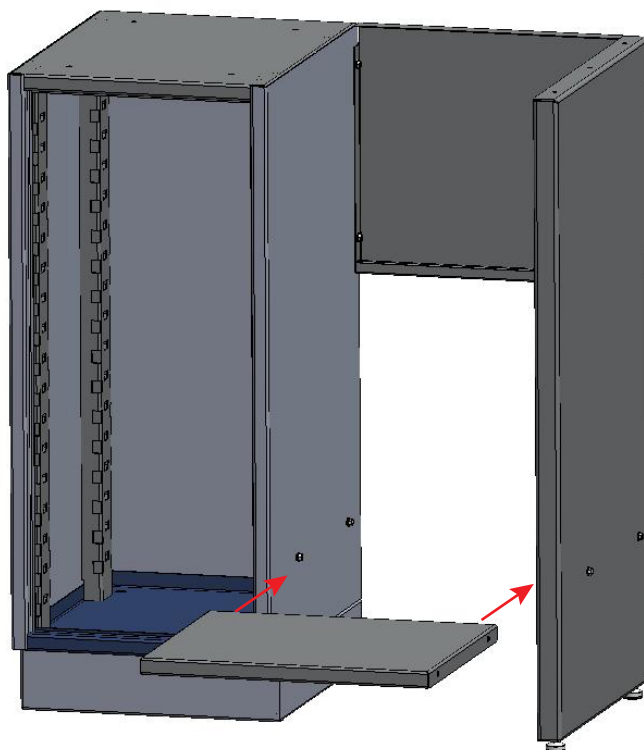

STEP 4


Place the top on the completed base.
Center the top left and right and front to back.

From the underside use (7) #14 x 1" lag screws screwed into the underside of the top.

If you have not already, you will need to remove the top drawer(s) to access the holes at the top of the cabinet shell. Pre-drilling the holes is recommended.



#14 x 1"
Lag Bolt

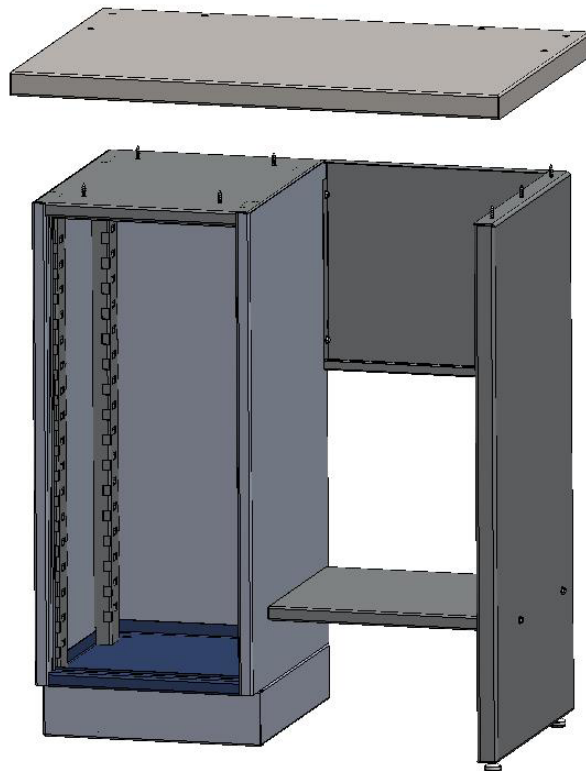

STEP 5


Attach the small pencil drawer to the bottom side of the worksurface.

Remove the drawer from the assembly. Position the drawer so it is centered left to right in the opening and so the face of the drawer will be flush with the face of the cabinet shell.

From the underside use (4) #14 x 1" lag screws.
If you have not already, you will need to remove the top drawer(s) to access the holes at the top of the cabinet shell. Pre-drilling the holes is recommended.



#14 x 1"
Lag Bolt

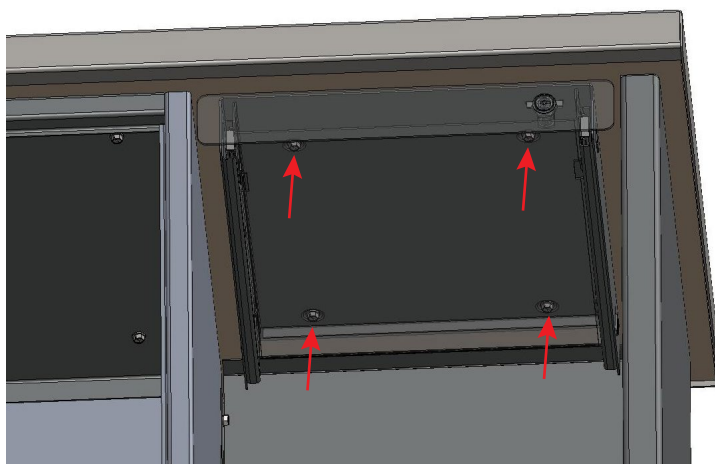

STEP 6

Set the upper hutch on the worksurface. Take care not to scratch the surface.
Use (6) 1/4-20 x 1/2" bolts threaded into the pre-installed inserts.



1/4-20 x 1/2"
Flange Head Bolt

