

CBL-72-0100.M1

TOOLS REQUIRED FOR ASSEMBLY

Socket set, Open end wrench set, Cordless drill with 3/8" socket bit (Magnetic recommended).

BEFORE ASSEMBLING THE WORKBENCH

Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled. We suggest that you clear & vacuum the area where the bench is to be assembled. It is important that the bench is assembled in the same sequence as instructed.

HARDWARE & GMI COMPONENTS

All assembly hardware is provided. Full size photos accompany each step where hardware is needed.




STEP 1

****Units are difficult to move once assembled. Begin assembly in the bench's final location****

Arrange cabinets side-to-side. Note that the center cabinet will have holes on both sides. The left cabinet will only have holes on the right hand side. The right cabinet will only have holes on the left hand side.

If your floor isn't level, they may not sit at the same height. You can adjust the cabinets' height by turning the leveler inserts in the bottom of the cabinets. (It is much easier to adjust before the cabinets are bolted together)

Once adjusted, Open the doors of the cabinets and attach cabinets together using (4) 1/4-20 x 1/2" Flange head bolts with Nylock nuts.

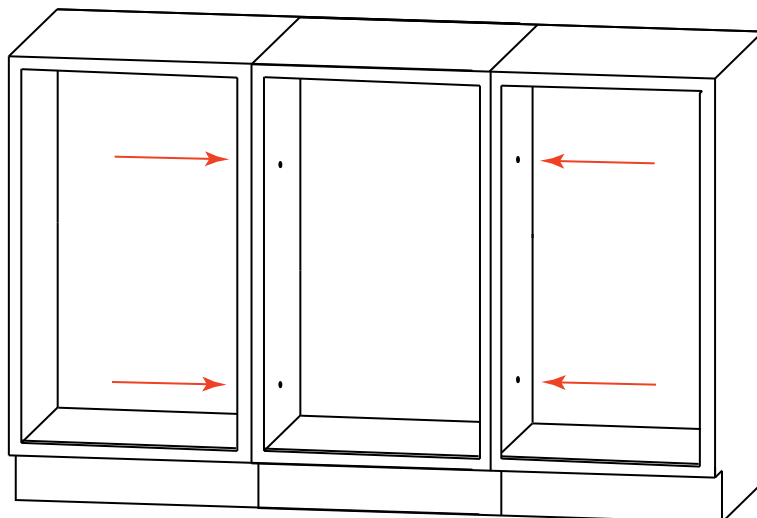

1/4-20 x 1/2"
Flange Head Bolt



Nylock Nut

STEP 2

Carefully position the top & place on the cabinets. The top should be centered left-to-right and a 1" overhang on the face side of the cabinets.

Note: For drawer cabinets the drawers may need to be removed to access the mounting holes in the top of the cabinets. See drawer removal sheet.

Attach using (12) #14 x 1" Lag screws.

