

GS Assembly Instructions

TOOLS REQUIRED FOR ASSEMBLY


Cordless drill with 3/8" Magnetic socket bit.

BEFORE ASSEMBLING THE WORKBENCH

Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled. We suggest that you clear & vacuum the area where the bench is to be assembled. It is important that the bench is assembled in the same sequence as instructed.


HARDWARE & GMI COMPONENTS

All assembly hardware is provided. Full size photos accompany each step where hardware is needed.

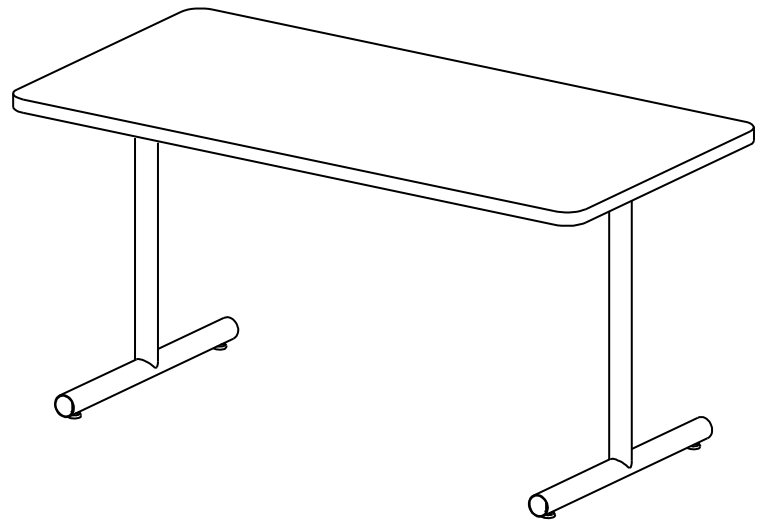

Position legs so mounting plates for the brace are pointed toward the center of the table.

STEP 1

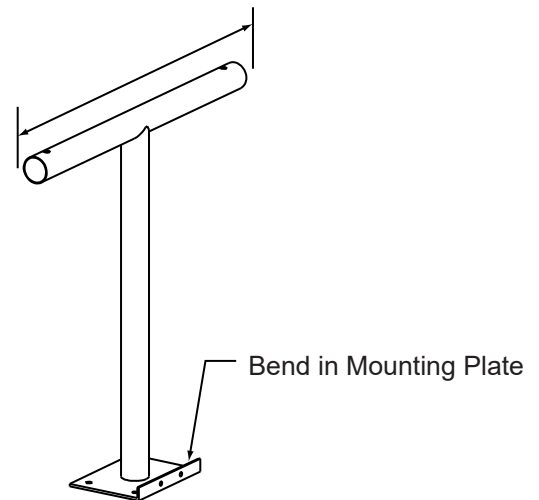


STEP 2

Identify the top support brace.

Attach it to the legs as shown to the right. Use (2) 1/4 x 1/2" Flange Head Bolts per leg.

Screw 2 chrome levelers into each leg.

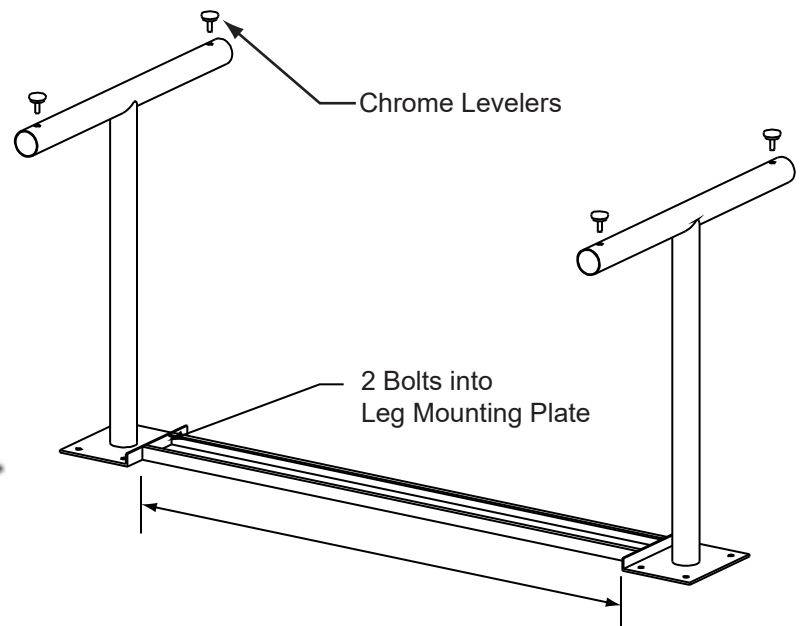

STEP 3

Carefully lay the work surface face down on the ground (or work table).

Set the assembled base onto the top. Your base should be centered front-to-back & left-to-right.

Attach the base to the work surface using #14 x 1" Lag Screws. (4 per leg, 4 per brace)

