

SRE-210 INSTRUCTOR STATION

TOOLS REQUIRED FOR ASSEMBLY

Cordless drill with phillips head Bit & magnetic extension,
 3/8" Magnetic socket bit.

BEFORE ASSEMBLING THE WORKBENCH

Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled. We suggest that you clear & vacuum the area where the bench is to be assembled. It is important that the bench is assembled in the same sequence as instructed.

HARDWARE & GMI COMPONENTS

All assembly hardware is provided. Full size photos accompany each step where hardware is needed.




STEP 1

Attach the modesty panel to the base cabinets and corner pedestal. Layout as shown in the top view. Use (2) 1/4-20 x 1/2" Bolts for each end of the modesty panels (8 total). Hand start all bolts or you may strip the threaded insert.



1/4-20 x 1/2"
Flange Head Bolt

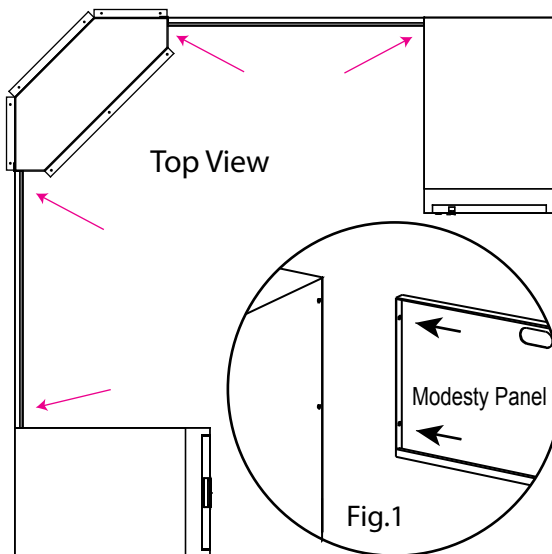

STEP 2


Place the top on the assembled base and pedestal. Adjust the top till it hangs uniformly over all sides.

Attach the top to the base cabinets and the pedestal. (You must remove the top drawer(s) from drawer cabinets).

Use #14 x 1" Lag Screws. (4) for each cabinet and (9) for the leg pedestal.



#14 x 1"
Lag Bolt

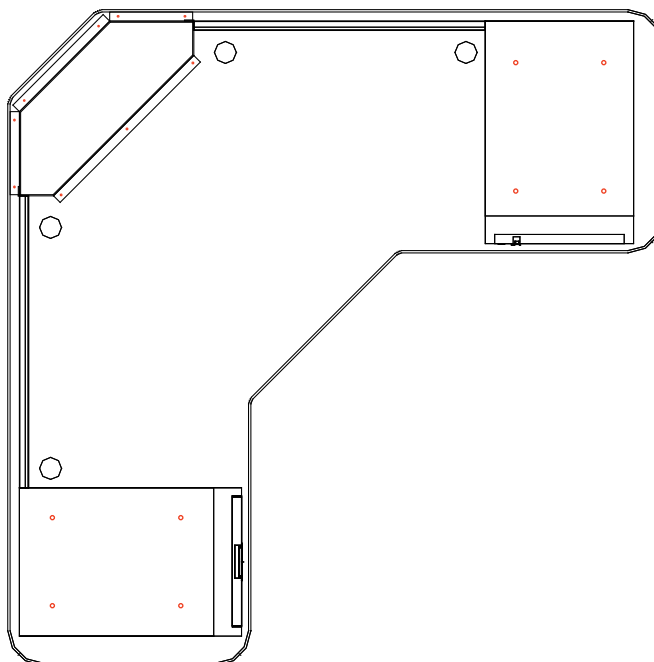

STEP 3

Velcro strip are supplied for wire management on the underside of the desks surface. Its suggested to mount the straps in the locations shown by the red X's in the image.

Using #10 x 5/8" black screws and screw through the center of the strap into the bottom of the top.



#10 x 5/8"
Sheet Metal Screw

