

## CBL-120 Series Work Benches

### TOOLS REQUIRED FOR ASSEMBLY


Socket set, Open end wrench set, Cordless drill with 3/8" socket bit (Magnetic recommended).

### BEFORE ASSEMBLING THE WORKBENCH

Assembly of this bench will require 2 people. Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled. We suggest that you clear & vacuum the area where the bench is to be assembled. It is important that the bench is assembled in the same sequence as instructed.

### HARDWARE

All assembly hardware is provided.

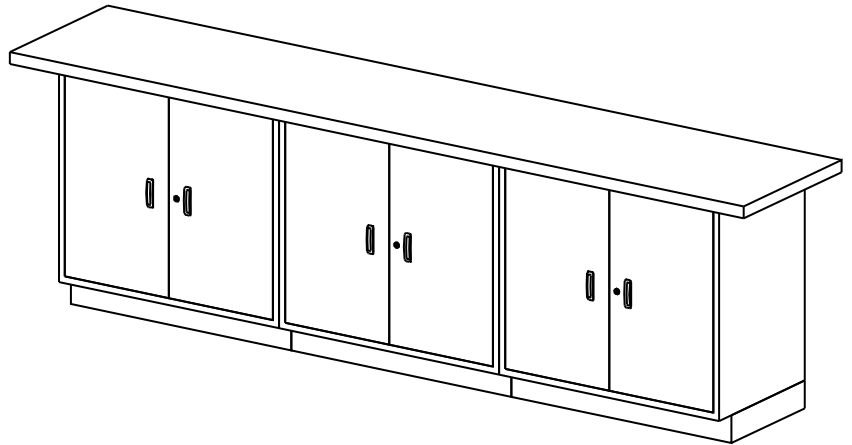

\*Assembly instructions will apply for multiple configurations.

## STEP 1


\*\*Units are difficult to move once assembled.  
Begin assembly in the bench's final location\*\*

Place cabinets together. Note: The center cabinet will have 2 threaded inserts installed on each side of the cabinet. Adjust each cabinet's height by turning the leveler inserts in the bottom until the cabinets are at the same height. (It is much easier to adjust before the cabinets are bolted together.)

Connect the cabinets side-to-side using (4) 1/4-20 x 1/2" Flange head bolts. Bolts thread into the pre-installed inserts of the center cabinet.



1/4-20 x 1/2"  
Flange Head Bolt

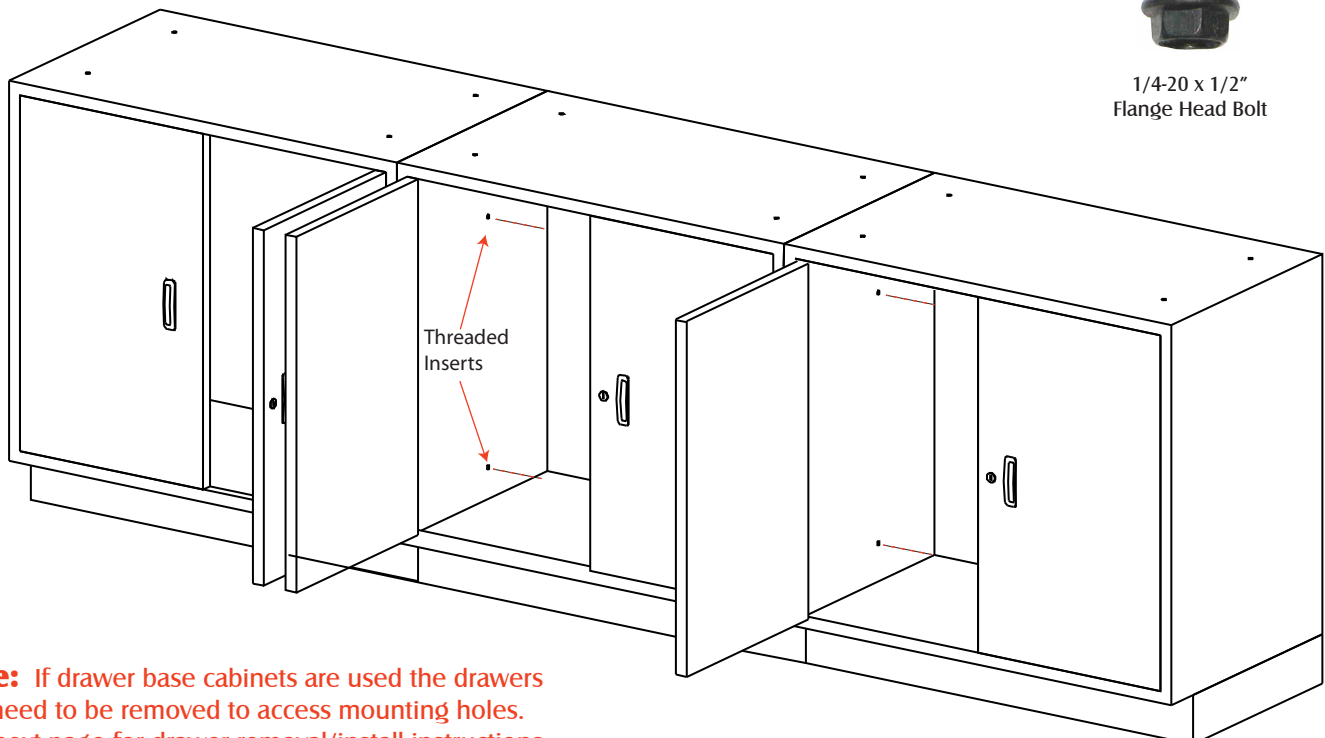

**Note:** If drawer base cabinets are used the drawers will need to be removed to access mounting holes. See next page for drawer removal/install instructions. Otherwise skip the next page.

## Drawer Removal and Installation


### BEFORE REMOVING DRAWERS

Read through the instructions to familiarize yourself with the proper steps.

We suggest that you have a clean area to place drawers once removed. Avoid stacking drawers after removal to prevent damage. Removal and installation of drawers should be done by two people.

### Removal

Extend the drawer until it is in its farthest out position. Push the small black plastic lever up or down (depending on left or right side) on the drawer glides (Refer to image). Pull the drawer gently outward till the clip disengages the glides. Pull the drawer straight outward till the drawer is free from the cabinet. Repeat this procedure for all for drawers.

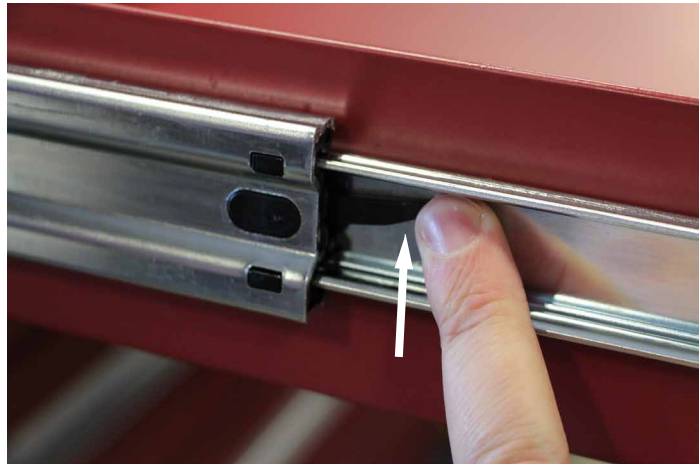

### Installation


Once everything is secure return the drawers to the cabinet. Fully extend the drawer glide from the cabinet. Carefully guide the drawer glide inner into the extended members. Keep the glide fully extended and slide the drawers into the glide until the black plastic clip fully engages into each side. Once clips are seated, gently push the drawer the rest of the way in. If the drawer does not slide in easily back out and ensure the glides are mating properly. See photo.



**STEP 2**

Place the top on the row of attached cabinets. Center the top left-to-right. Adjust top to desired location front-to-back.

Attach using (4) #14 x 1" Lag Screws per cabinet.

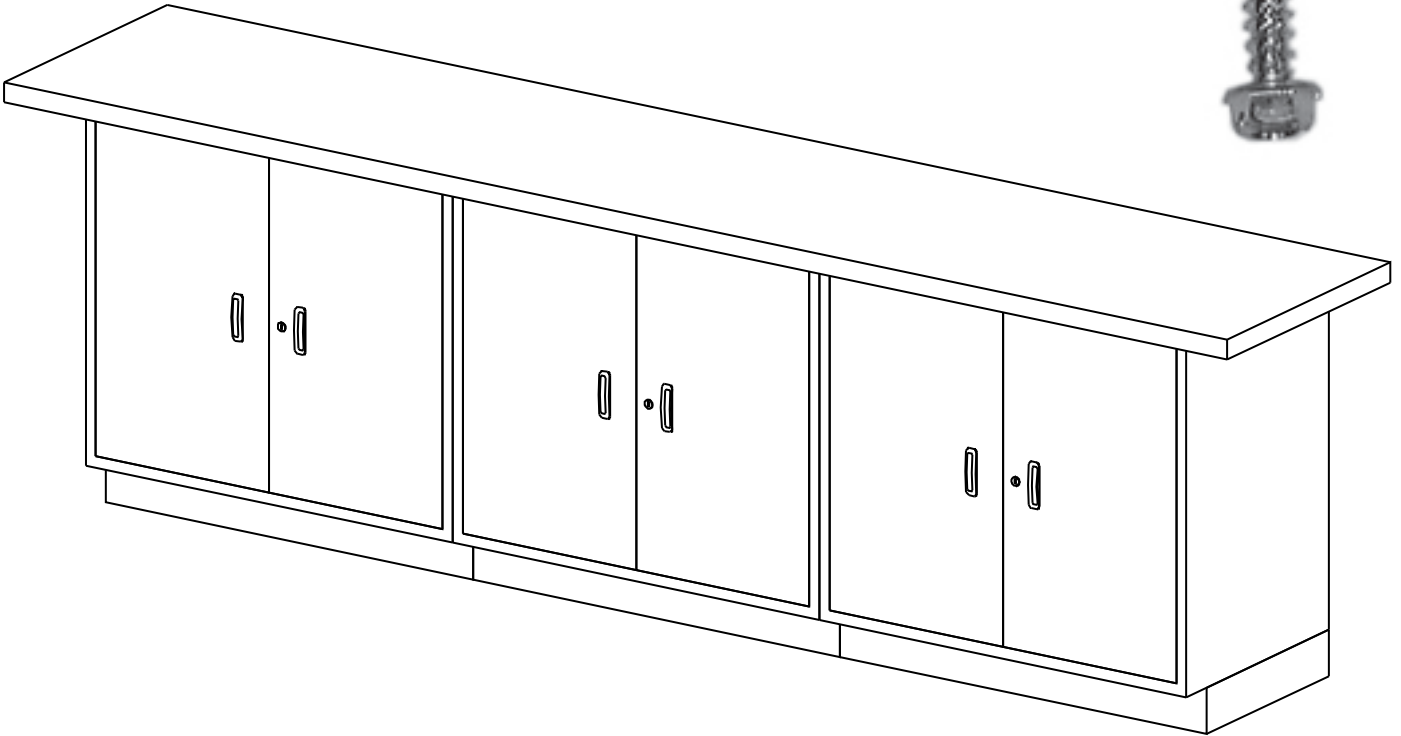

**STEP 3**

For cabinets with shelves, place one shelf in each cabinet using the supplied shelf clips.

For cabinets with drawers, re-install drawers per provided instructions.