


### TOOLS REQUIRED FOR ASSEMBLY

Socket set, Open end wrench set, Cordless drill with 3/8" socket bit (Magnetic recommended).

### BEFORE ASSEMBLY

Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled. We suggest that you clear & vacuum the area where the bench is to be assembled. It is important that the bench is assembled in the same sequence as instructed.

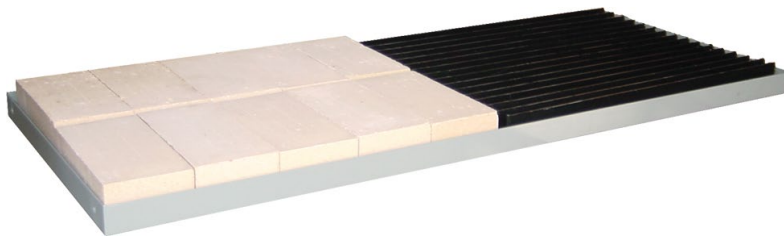

### HARDWARE

All assembly hardware is provided.

## STEP 1

Note: Assistance will be needed to mount the table.

Insert the table frame into the assembled booth. The booth walls will have two mounting plates for attaching the table to the wall. Either the two side panels or the front and rear panel will have mounting plates depending on which table orientation was ordered.

Use (4) 5/16 x 1" hex head bolts, flat washers, and nylock nuts to bolt the frame in place.

Note: If booths are arranged in a row additional assistance may be needed to mount the tables. At points where two booths are joined together the bolts will need to run through one booth and into the next.




5/16-18 x 1"  
Hex Head Bolt



5/16" Washer



Nylock Nut

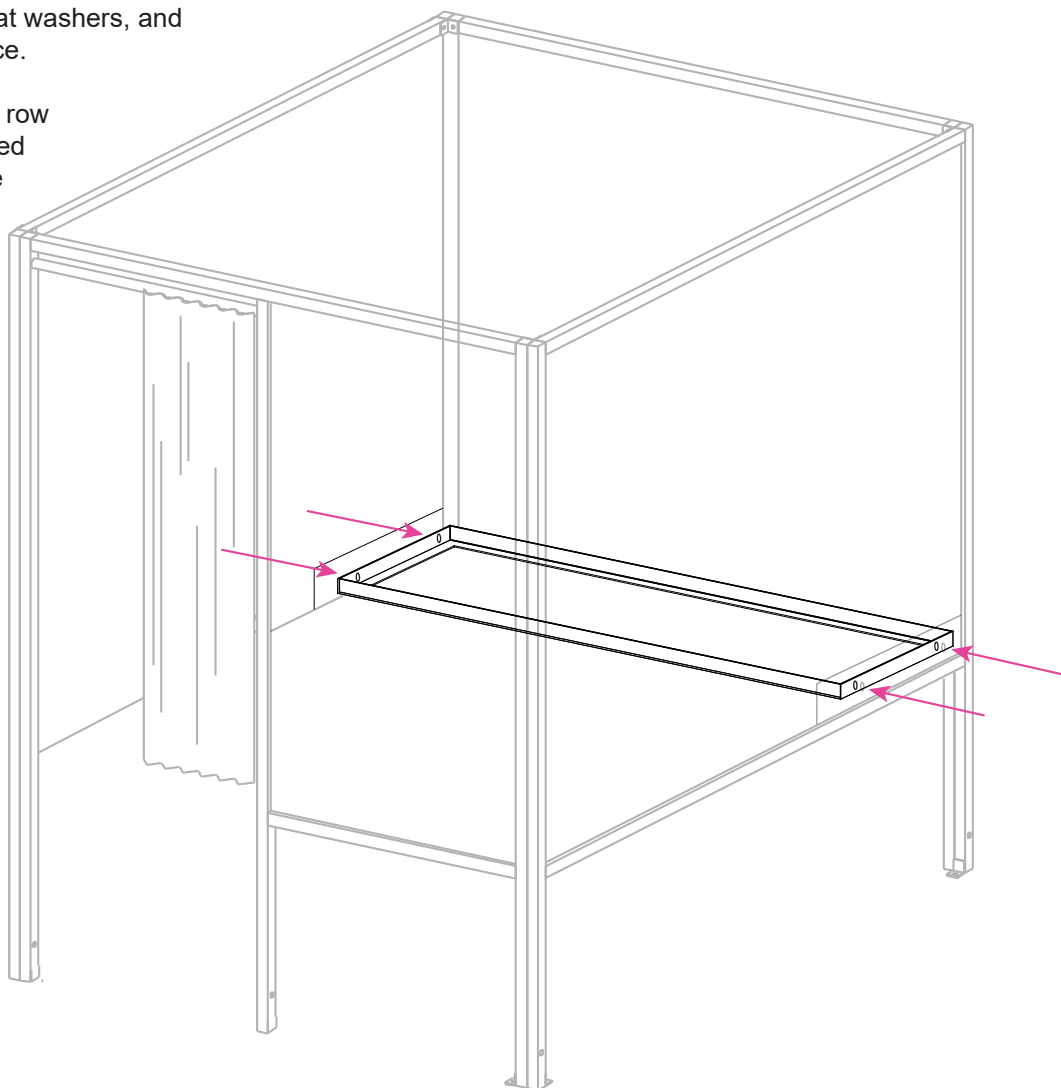

## STEP 2

Insert brick and/or grates into the table frame once the frame mounting bolts are fully tightened.

Worksurface will vary depending on type that was ordered.

**Note:**

If a GWP-2 Weld positioner has been purchased, a hole will need to be drilled in the bottom pan to mount the positioner in its desired location.

Place the grate in position in the pan, next mark the hole position for the GWP-2 mounting T-bolt to pass through. Drill the hole using a 13/32" drill bit.

